


There are two connection ways:

1. Computer connect to the matrix directly through a network cable:


Step1: Make sure the computer IP address is STATIC;

Step2: Make sure the matrix IP address is STATIC;

Step3: Use the PC tool to search the matrix;

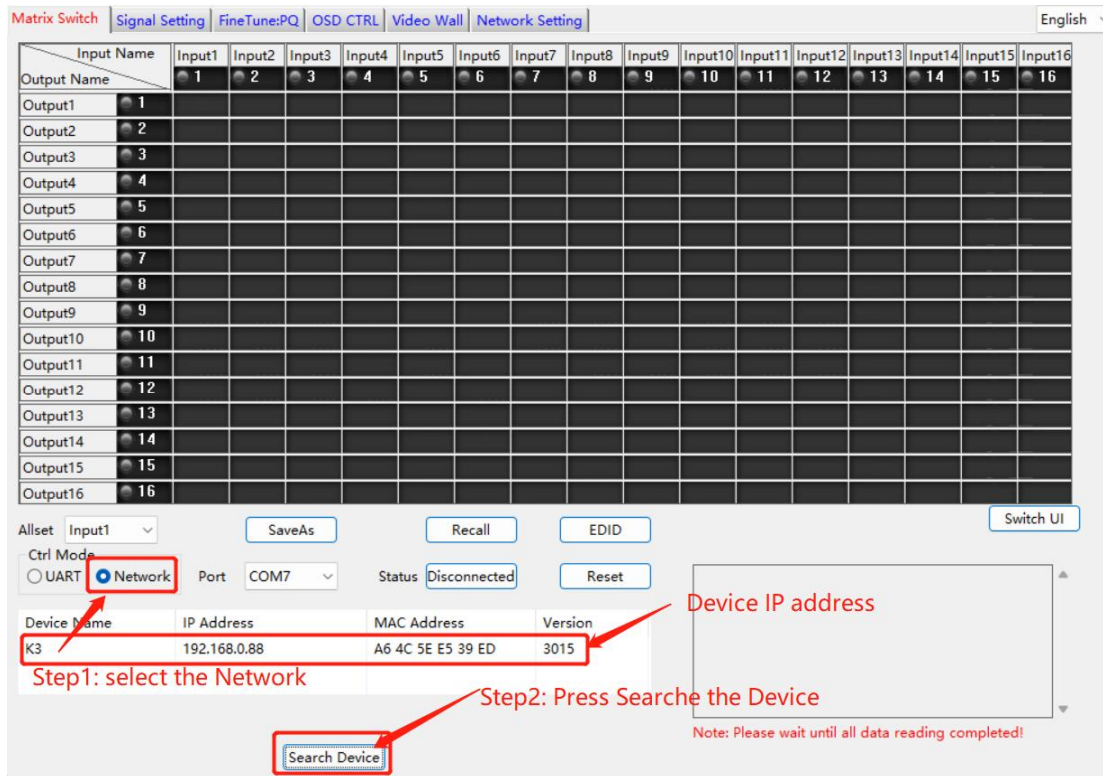

Step4: Check the Device IP address and the computer IP address is in the same local area network or not, if not, turn to Network Setting page;

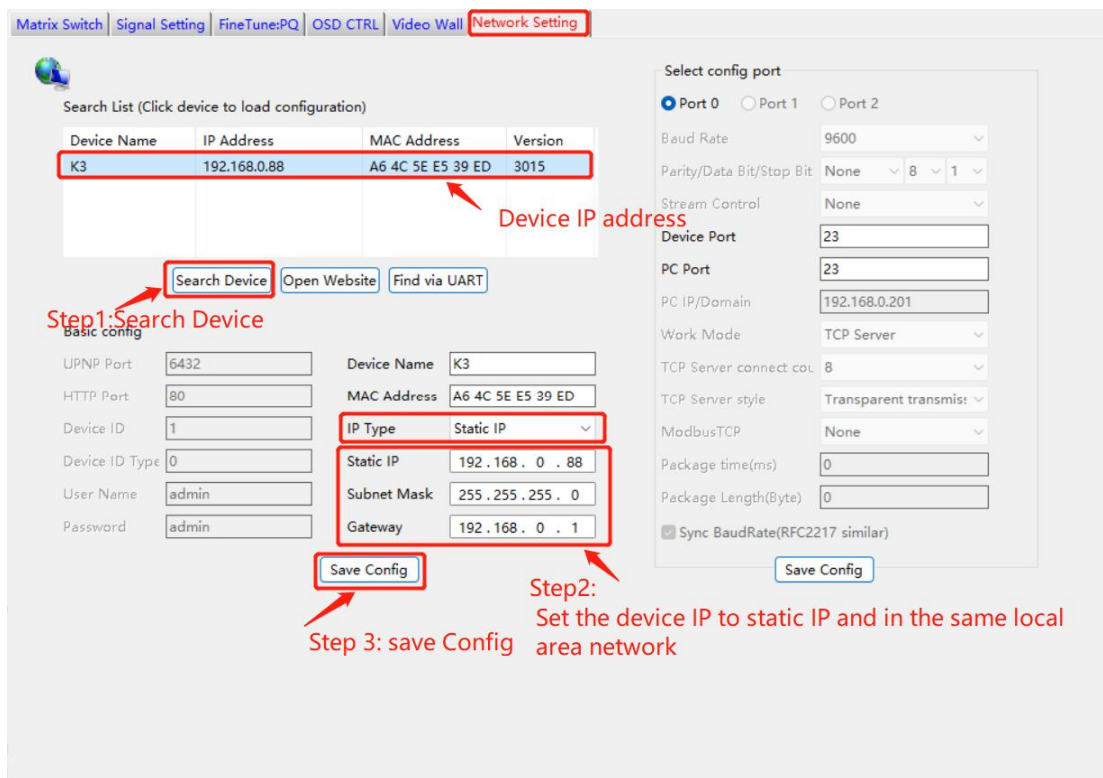

2. The computer and the matrix are connected to the same router:

Step1: Turn to Matrix Switch page, to select the Ctrl Mode to Network, and search the device;

